

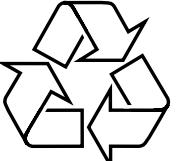


Let's make things better

PHILIPS

AZ 2048 MP3-CD Soundmachine

English
Français
Español
Deutsch

Meet PHILIPS at the internet <http://www.audio.philips.com>CLASS 1
LASER PRODUCT

3140 115 2905.1

Printed in China

CMM/RM/0218

Important notes for users in the U.K.

TROUBLESHOOTING

Main plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

1 Remove fuse cover and fuse.

2 Fix new fuse which should be a BS1362 5A, A.S.T.A. or BSI approved type.

3 Refit the fuse cover.

If the fitting plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

Note: The several plug must be disposed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured with the following code:

BLUE = "NEUTRAL" (N) and BROWN = "LIVE" (L).

• As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the BLUE wire to the terminal which is marked with the letter "N" or coloured BLACK.

- Connect the BROWN wire to the terminal which is marked with the letter "L" or coloured RED.

- Do not connect either wires to the earth terminal in the plug, marked "E" (or the safety earth symbol) or coloured green and yellow.

Before replacing the plug cover, make certain that the cordgrip is clamped over the sheath of the lead - not simply over the two wires.

Copyright in the U.K.

Recording and playback of material may require consent.

See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

•

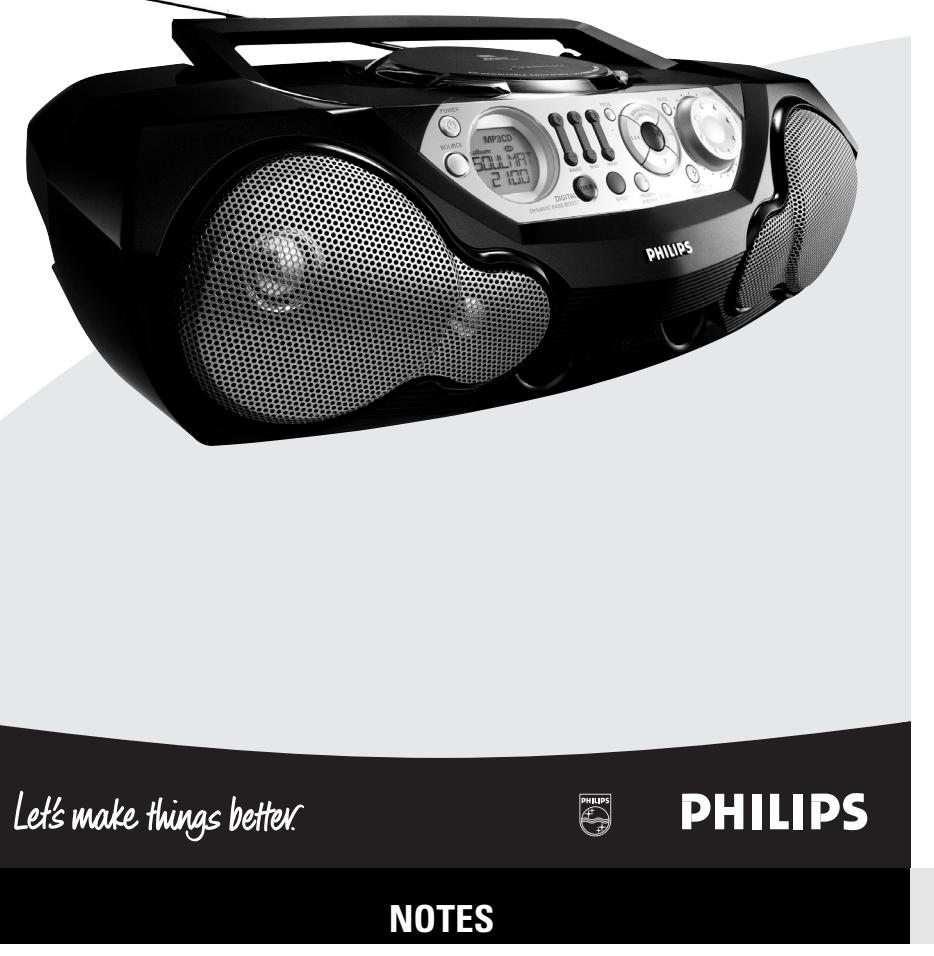
•

•



MP3-CD Soundmachine

A2048

Español

Let's make things better



PHILIPS

NOTES**REPRODUCTOR DE MP3-CD/CD****Reproductor de MP3-CD/CD****Información general****Formatos compatibles****Formato de disco****ISO9660****Joliet****CDs****sesiones múltiples****Utilice formato de disco****ISO9660****cuando grabe****CD-ROM****Formato de disco****MP3****formato****último****versión****última****versión**